

# SOLUTIONS FOR STRAIGHT TRUCKS

## Air-Weigh ON-BOARD SCALES



### An investment in safety, vehicle life and profit

**Increase  
safety and  
awareness**

**Avoid overloading  
with real time  
weights**

**Reduce Maintenance  
Cost for Vehicle Wear  
and tear**

- Easy to install and calibrate
- Accurately measures steer and drive axle group weights, GVW and net payload
- Integrate with third party on-board computer and LoadMaxx App
- Compensation for temperature and altitude change
- Available for air-ride and most mechanical suspensions
- Easily set warning alarms for exceeding weights

#### Easy to operate

The convenient in-dash display accurately shows the steer and drive axle weights, GVW and net payload for both air and mechanical suspensions. Simply install the scale in the cab, install sensors and connect power to the vehicle. Load your truck, check your weights - it's that easy.



#### DISPLAY

Digital 2" round in-dash

#### CALIBRATION

Dual-point, PIN Protection

#### WEIGHTS

Accurately measures steer, drive, axle group weights, GVW, and net payload

#### INTEGRATION

Integrate with third party on-board computer software

#### ALARM

Two outputs with warning and target weight thresholds

#### OPERATING TEMPERATURE

0° - 50°C / -40° - 185°F

#### ACCURACY

300 lbs - Air Suspension  
3% - Mechanical Suspension

#### WARRANTY

3-Years, Made in the USA